

Folded depth
of only
10³/₄"!



**Easy and fast installation
that eliminates the
barrier of stairs**

**Ultra-slim profile folds
compactly out of the
way when not in use**

**Comfortable and
width-adjustable
for best fit**

Savaria® K2 Stairlift

K2 - STRAIGHT TO THE TOP

The Savaria K2 stairlift is one of the easiest ways to stay in your home and enjoy the freedom of barrier-free living. Installed on your stairs, in only a few hours, the stairlift carries you smoothly and quietly up a straight flight of stairs. The Savaria K2 stairlift is uniquely compact – with one of the slimmest fold-up dimensions on the market at only 10³/₄" deep – to allow easy access to the stairs when the lift is not in use.

With safety features including a retractable seat belt, overspeed governor and obstacle sensor system, you can count on your Savaria stairlift. Finished in soft white with an unobtrusive design, the K2 blends easily into your home décor.

 **savaria®**



Savaria® K2 Stairlift

K 2 – STRAIGHT TO THE TOP



- Ultra-slim folded size of only 10¾" – one of the smallest profiles on the market – to keep the unit out of the way when not in use
- Quiet and smooth-riding operation from the rack and pinion drive system
- Battery operated with built-in charging on the top and bottom of the rail so the chair can be used several times even through a power failure
- LED status lights to advise you of any issues
- Obstacle sensor system on the carriage and footrest to stop the chair if it meets an obstruction
- Swivel and lock seat at top landing for added stability getting on and off the chair
- Retractable seat belt with anti-slip footrest for safety and ease of use
- Fast installation means you can enjoy the benefits of your stairlift quickly
- Unit can be installed on either side of the stairs and includes 2 infrared (wireless) remote controls plus toggle switch on arm rest for easy operation
- Comfortable and durable seat with width-adjustable arms up to 20" wide and 350 lb capacity
- Options: continuous charge system, manual flip-up rail, seat swivel paddle, rail extension brackets to create no intrusion at top landing and emergency stop button
- **Optional outdoor package**, suitable for moderate climates, includes stainless steel rack and support legs, and zinc hardware for rust resistance; UV-rated, water repellent closed-cell foam seat with cover and sturdy clip seatbelt; RF remote controls; and upgraded continuous-charge system for reliable operation in variable temperatures

SPECIFICATIONS


| | |
|-------------------------|---|
| Applications | Residential, indoor, straight-run stairway |
| Capacity | 350 lb (159 kg) ¹ |
| Maximum travel distance | 32 ft (9.75 m) |
| Travel speed | 15 ft/min (0.08 m/s) |
| Drive | Rack and pinion |
| Motor | ⅓ HP, 24 VDC power that charges on standard household power |
| Fold-up depth | 10¾" (27.3 cm) ² |
| Fold-out depth | 21½" (54.6 cm) ² |
| Range of incline | 30° to 55° |
| Warranty | 36 months parts, ask dealer for details |

¹For stair angle > 45°, use of flip-up rail, or rail extension bracket, max capacity is 300 lb.
²Some additional running clearance may be required by local code.

Talk to a skilled Savaria dealer about how the Savaria K2 stairlift can give you the mobility you need in your home without major construction. Your local dealer can ensure your Savaria product is installed to comply with local and national codes.

Measurements vary based on rail angle:

- A: 21.7–22.2" (551–564 mm)
- B: 16.7–17.3" (424–439 mm)
- C: 4.7–5" (119–127 mm)

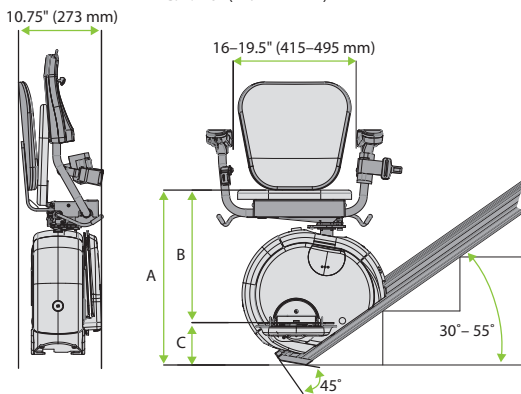

Authorized Savaria Dealer:



savaria.com

2 Walker Drive Brampton ON L6T 5E1 Canada

tel: 800.661.5112