

luxury
touch
screen

home elevators by
savaria



Add a Modern Touch



The Savaria touch screen COP (cab operating panel) provides control for the operation of your home elevator for desired floor, door opening and alarm functions on the large glass screen. Animated themes show the movement as the elevator travels floor-to-floor. Choose your theme suit your décor, or even your mood of the moment with a simple swipe. You can customize the landing names for your home when you order your elevator. The touchscreen is available for the Savaria Eclipse, Infinity and Zenith home elevators.

swipe for
change

Choose a theme, change your theme

With a quick swipe, select the screen you want. From the simplicity of white to botanical green, vintage art deco, or the drama of architectural black, there's a theme for your style. Customized for the number of stops and landing names in your home, each theme features movement or animated actions.



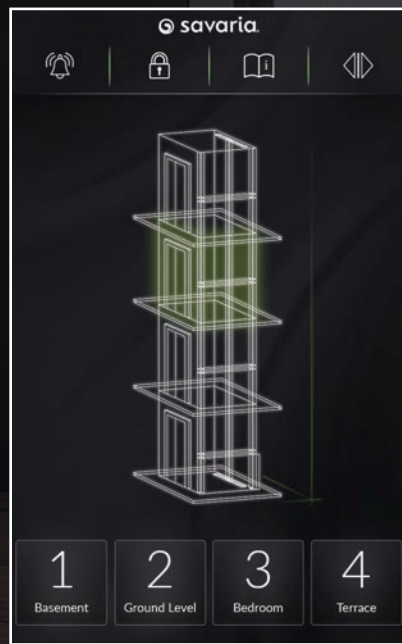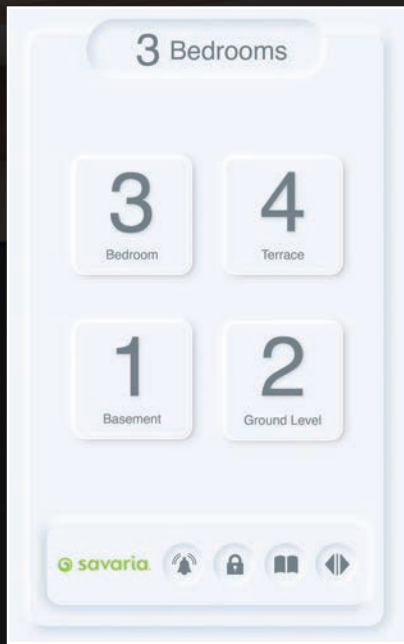

at your fingertips

Access simple elevator operating instructions*

Customize landing names when you order your elevator

Swipe to change the theme

Activate the alarm



Lock access to the elevator

The touch screen COP is available for the Savaria Eclipse, Infinity and Zenith models in North America and Australia. Please note this upgrade is not available for concurrent landing models (two-doors at one landing), and the screen does not meet A117.1 accessibility guidelines. Please consult your authorized Savaria dealer for complete details and specifications.

Locate a Savaria home elevator dealer near you
1-855-Savaria (728.2742)

SPECIFICATIONS

Screen size	6.6" x 10.1" (169 mm x 258 mm)
Resolution	1280 by 800 pixels
Active screen area	5.3" x 8.5" (135 mm x 217 mm)
Viewing	Full angle (IPS)
Brightness	800 cd/m ² (high) with 45 LEDs
Glass	1.1 mm cover, multi-touch, anti-glare

*Operating instructions are in English

A physical emergency stop button and phone keypad are integrated below the screen on the metal COP panel